 


**Fully Pre-Installed System**  
 No user configuration required

 
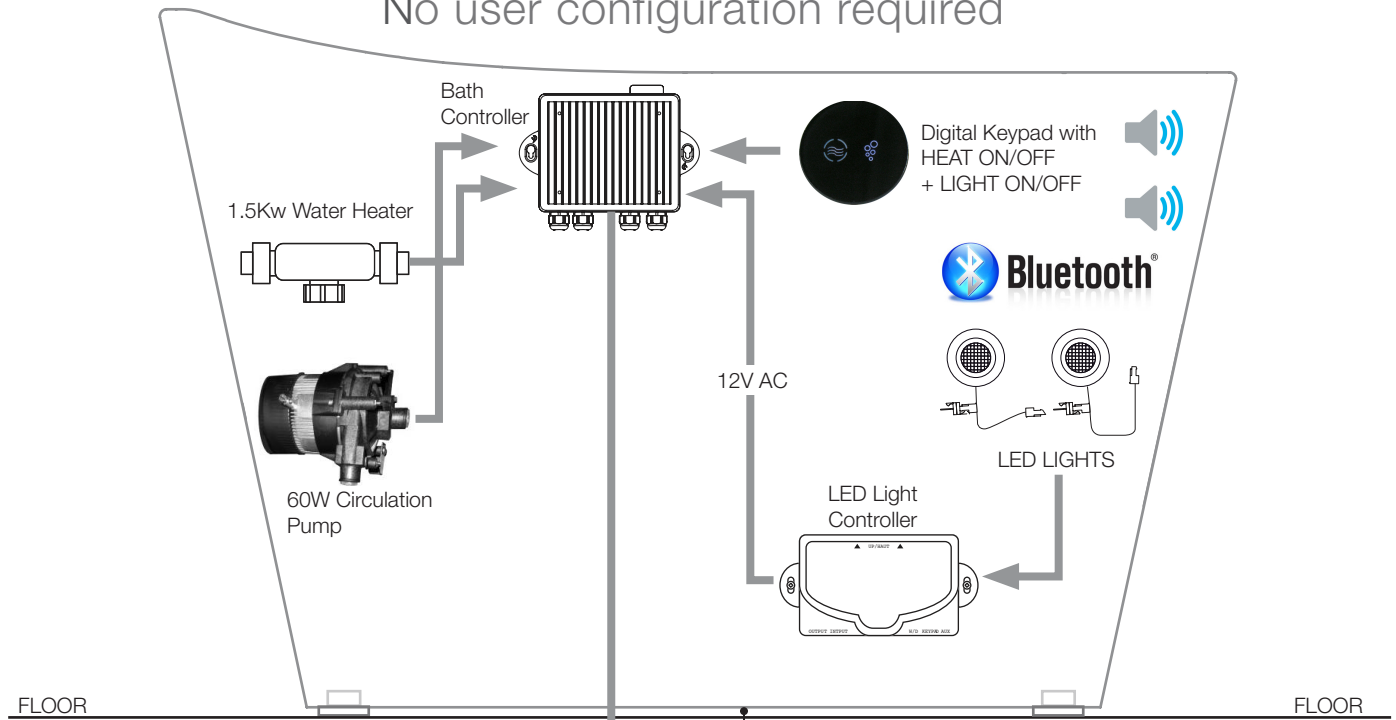 


**ENSURING SUFFICIENT AIR CAVITY BETWEEN THE BATH AND THE FLOOR**

Upon installing the bathtub, ensure that a sufficient cavity is left between the bath and the floor for ventilation purposes. Do NOT silicone the entire perimeter and do NOT retract the height adjustable bath feet fully. The exterior bath walls should NOT touch the floor.  
 Silicon the bath feet and some sections of the skirt allowing for sufficient air intake and ventilation. Insufficient air cavity volume beneath the bath can lead to undesirable heat accumulation. Confirm with your installer that proper sizing and/or venting recommendations have been followed.

**Plug and Play Simplicity:**

- 1 Plug the supplied electrical plug into your **European** or **UK** wall outlet
- 2 Enjoy your Aquatica<sup>®</sup> Tranquility bathtub

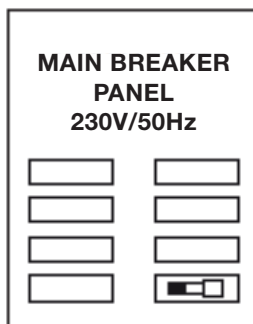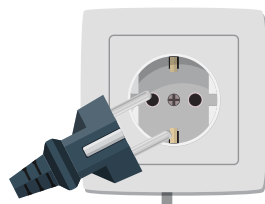

**IMPORTANT:**  
 16A/230V BREAKER WITH RCD SAFETY SWITCH  
 (aka **RCBO (residual-current circuit breaker with overcurrent protection)**  
 (ONE 16A/230 VOLT CIRCUIT.)