

# aquatica®

*Function, Form & Fashion*





## *Anette Tinted Curved Glass Shower Cabin*


Installation of shower wall / Dušiseina paigaldusjuhend /  
Инструкция по установке душевой стенки

ANETTE


0

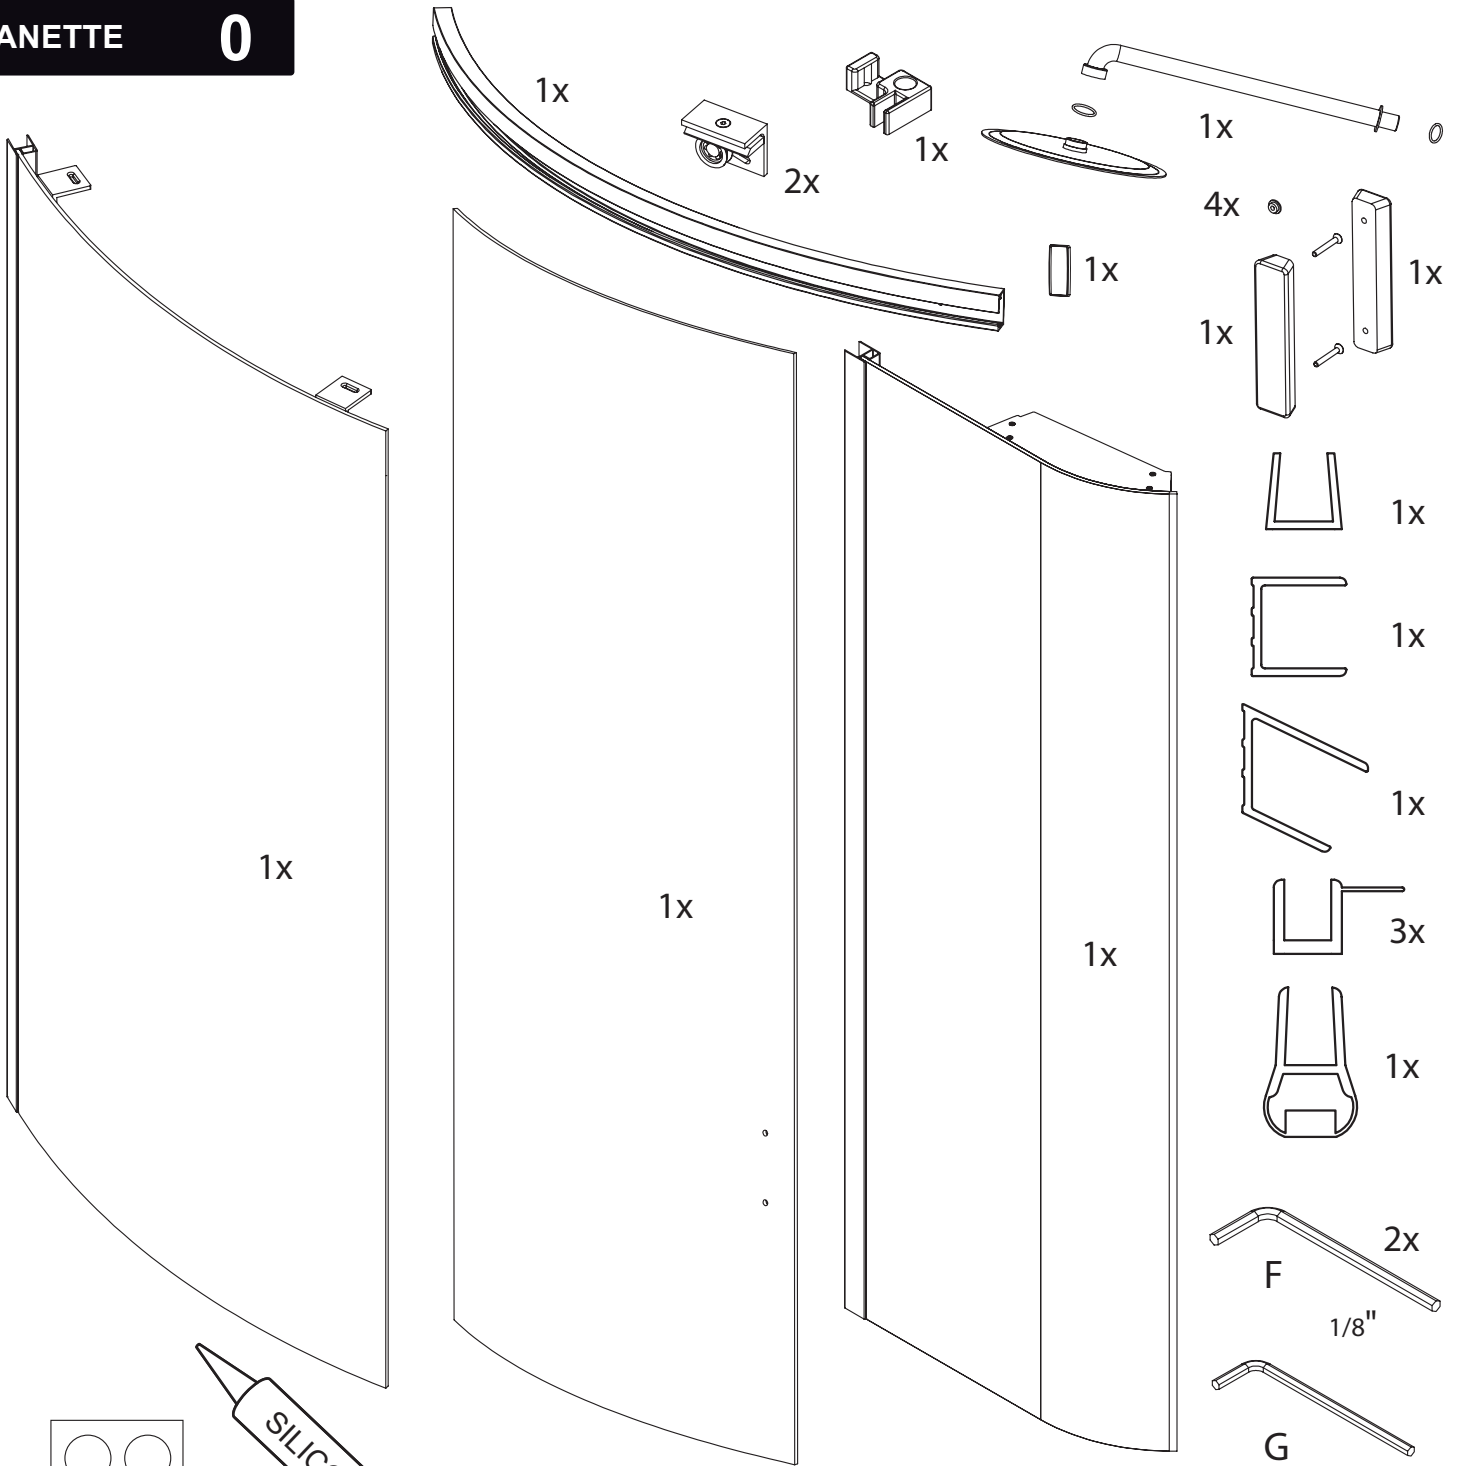

H



1/2" x Ø 1/2" x 0'-1 1/4"



1/4" x Ø 1/8" x 0'-1 1/4"


E



4x

D

1xM6



1xM6x40

C

2xM5x12



A



1xM4



1xM4x30

B

NB! Not in Package.

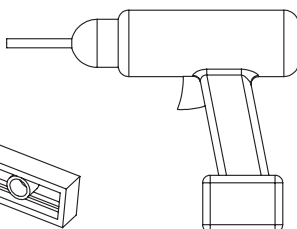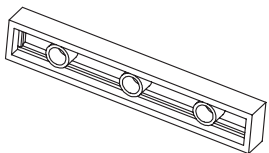



Ø 1/8"

Ø 1/4"

Ø 1/2"

Ø 0'-1 1/4"

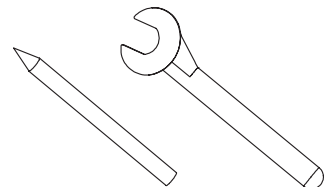

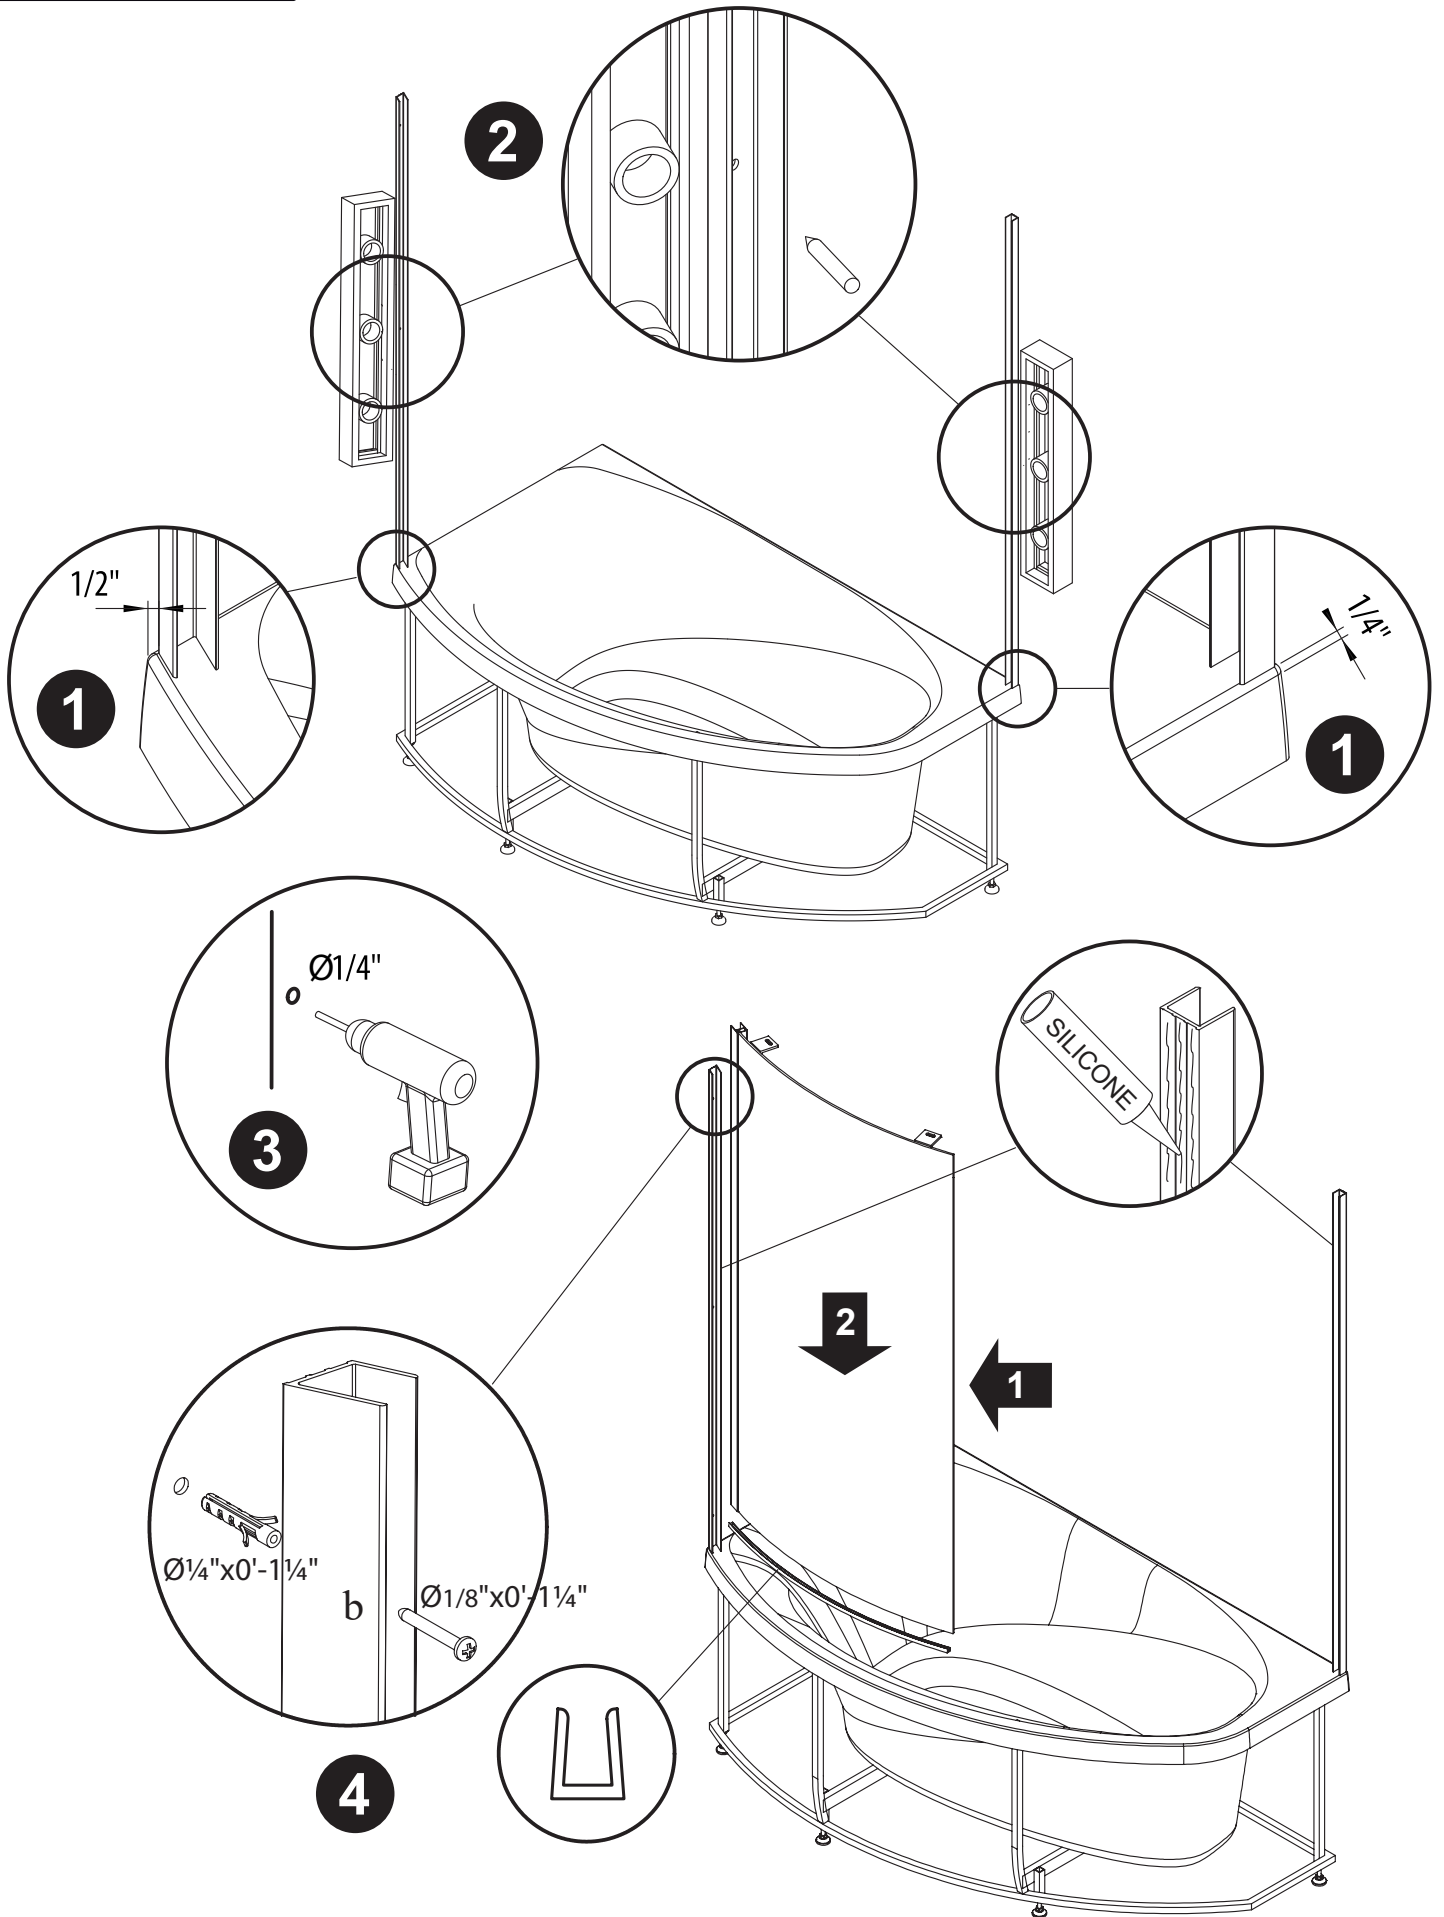

ANETTE

2

5

6

Ø1/8"

7

D








2

1


8

1

2

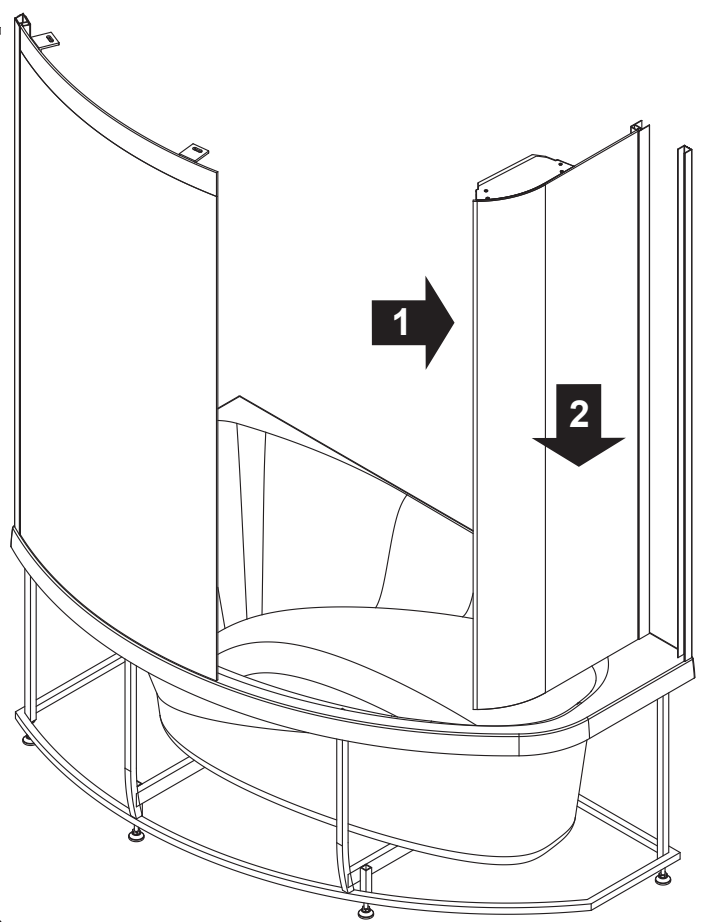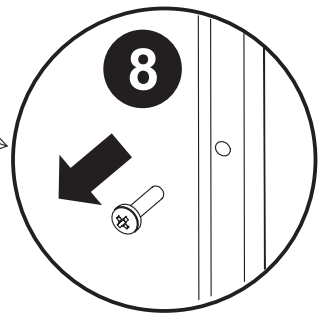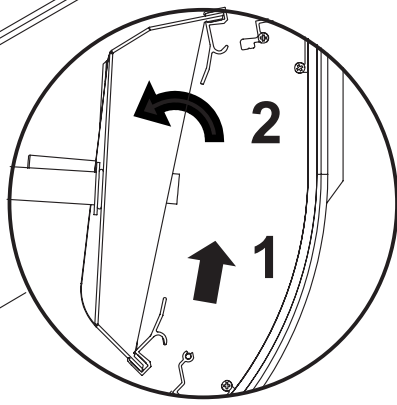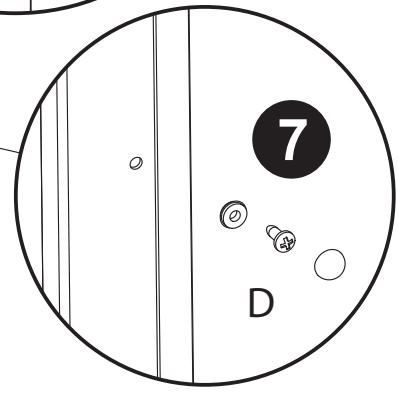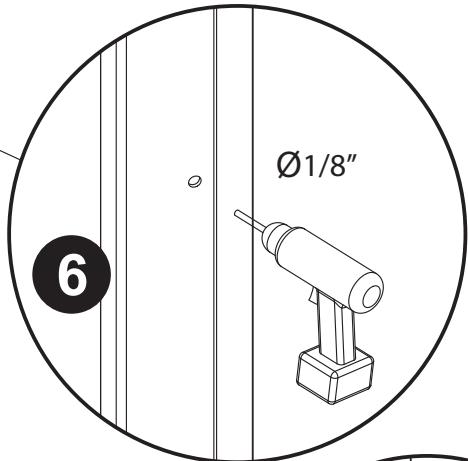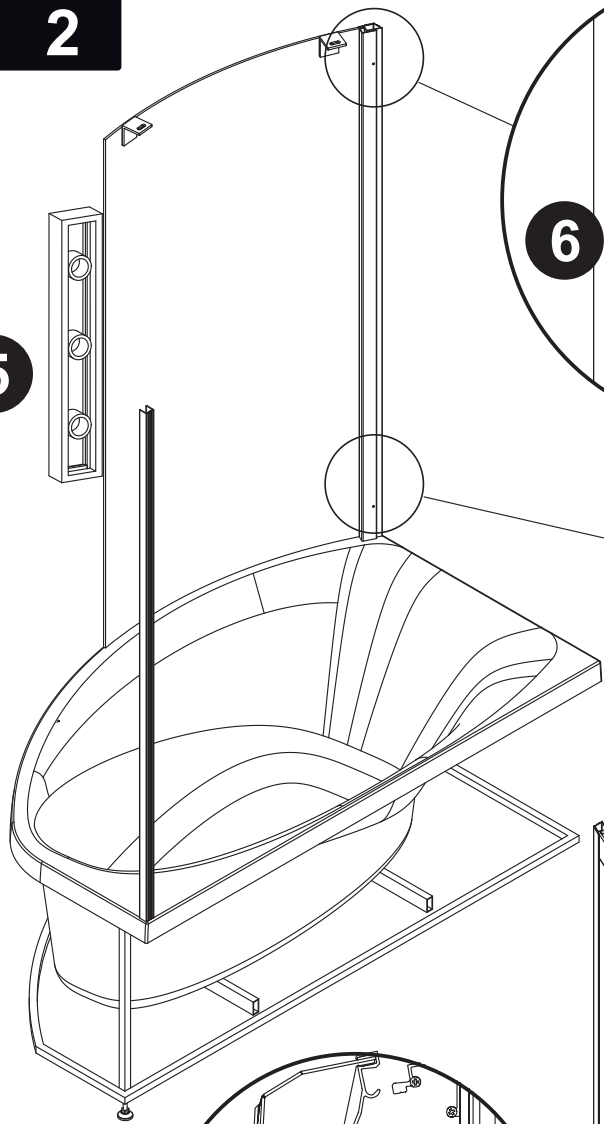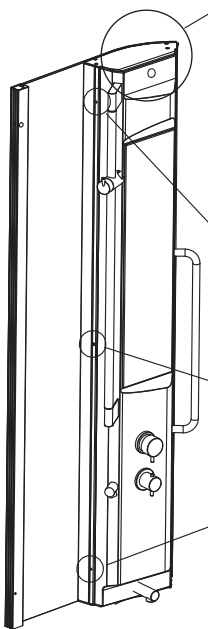



A=B

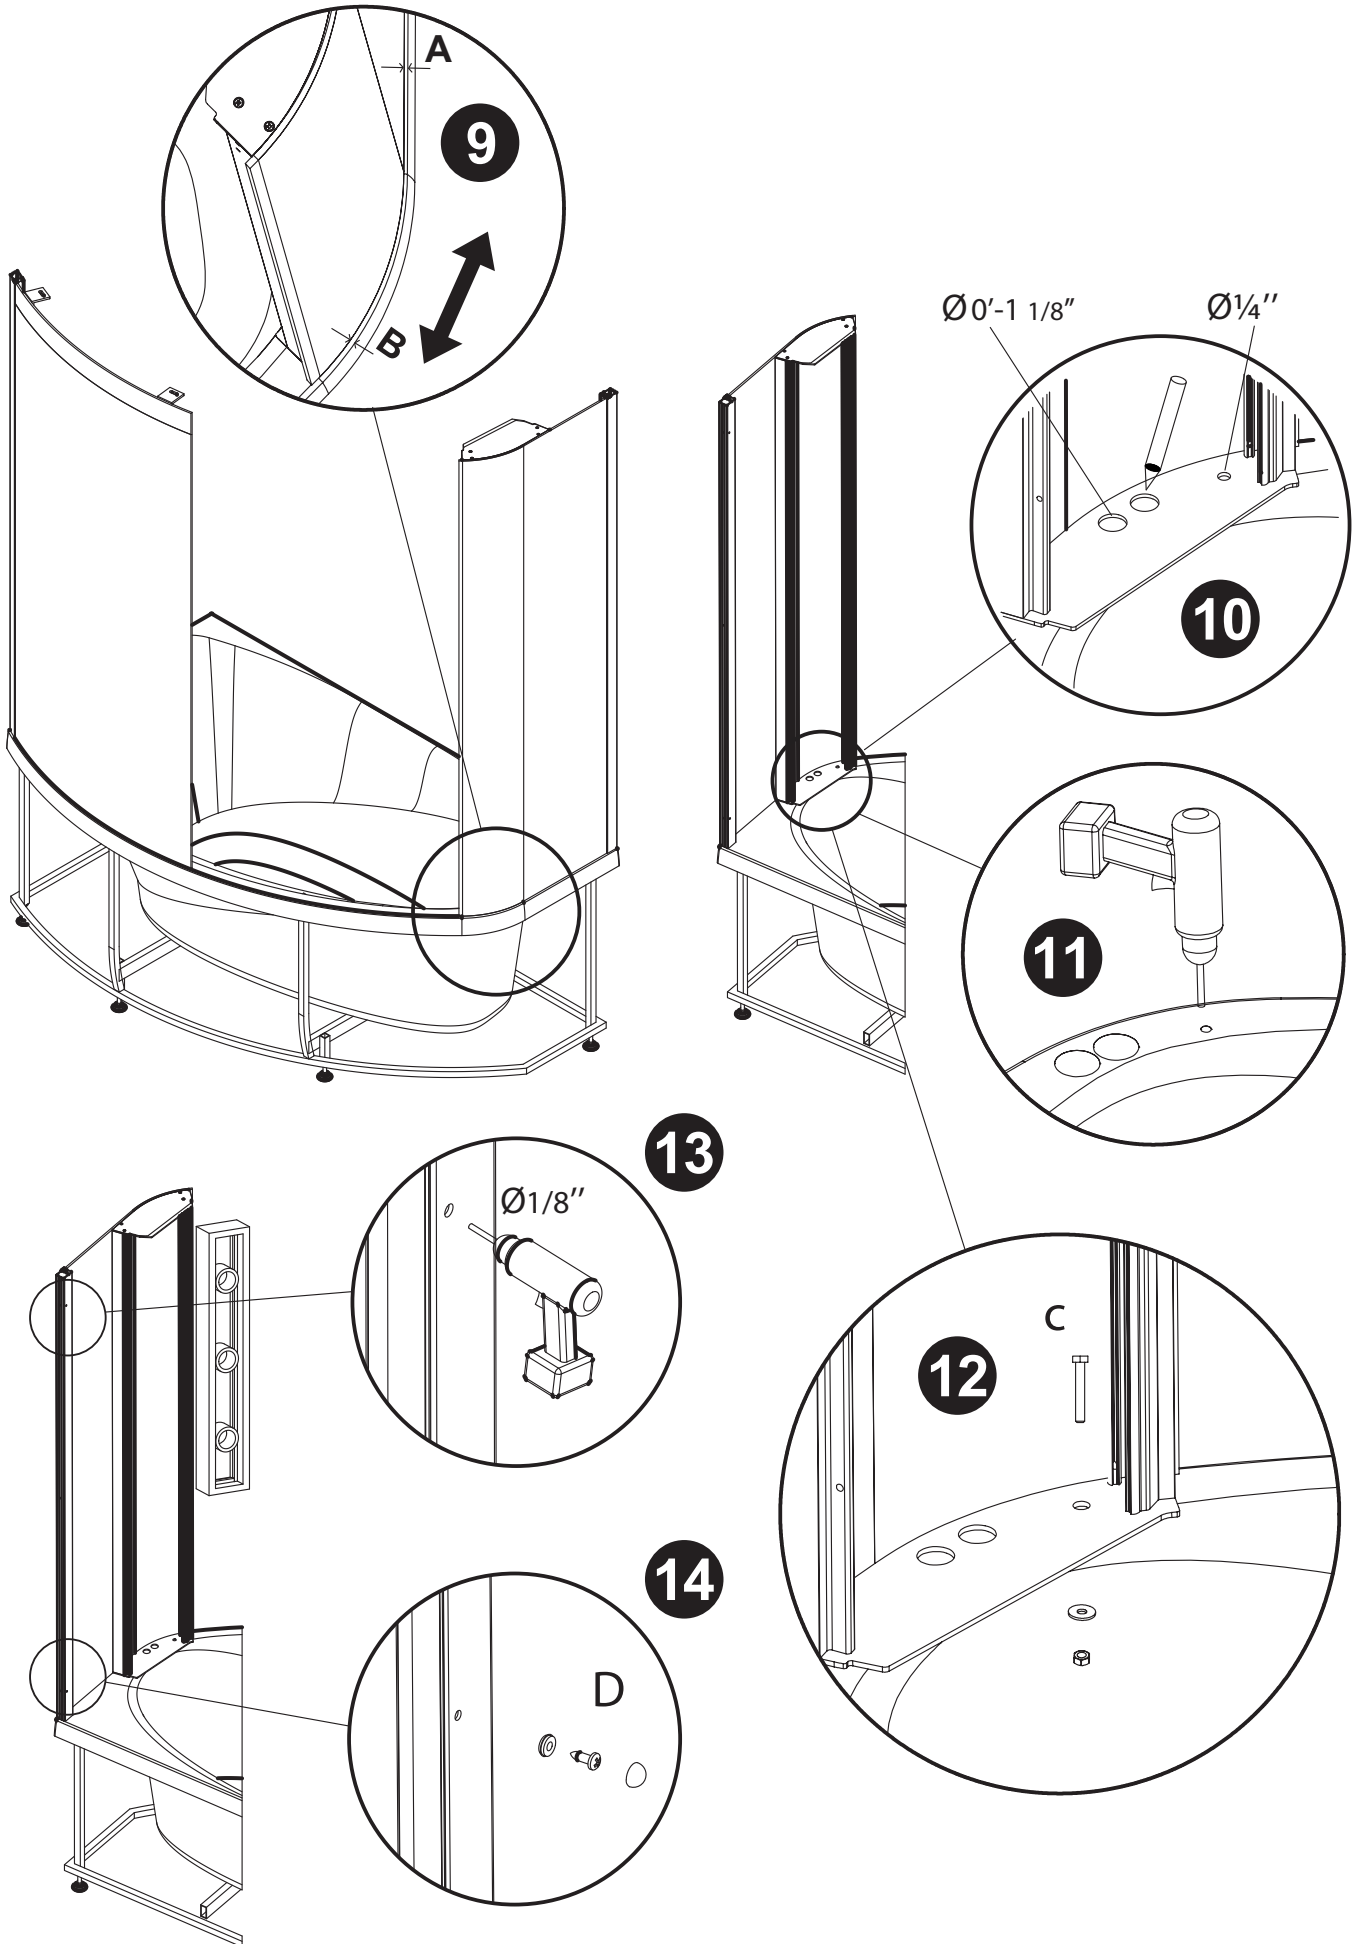




ANETTE

4



15

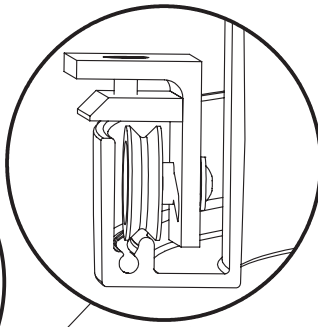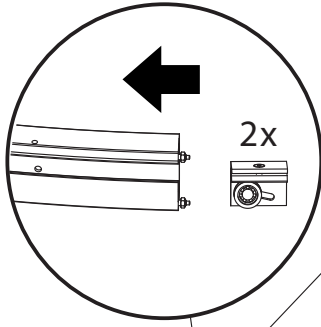


16

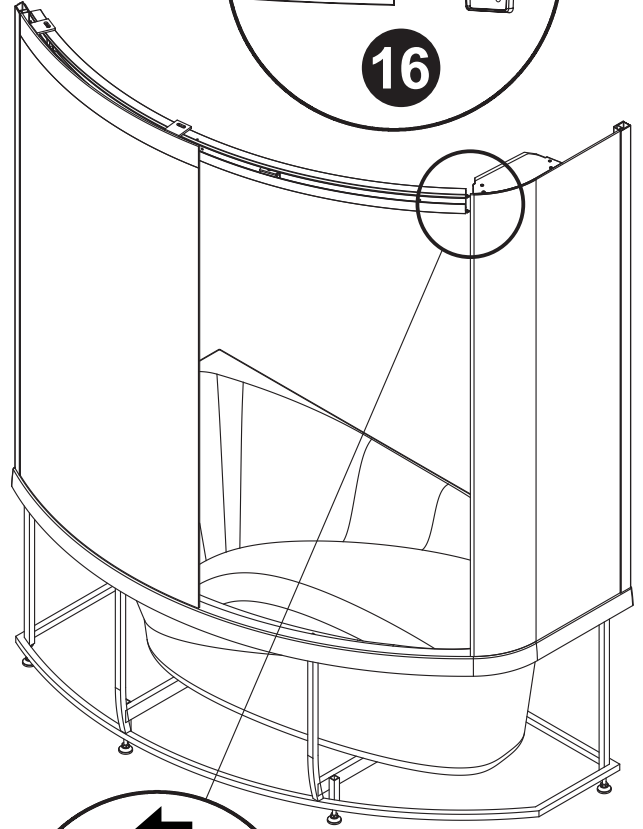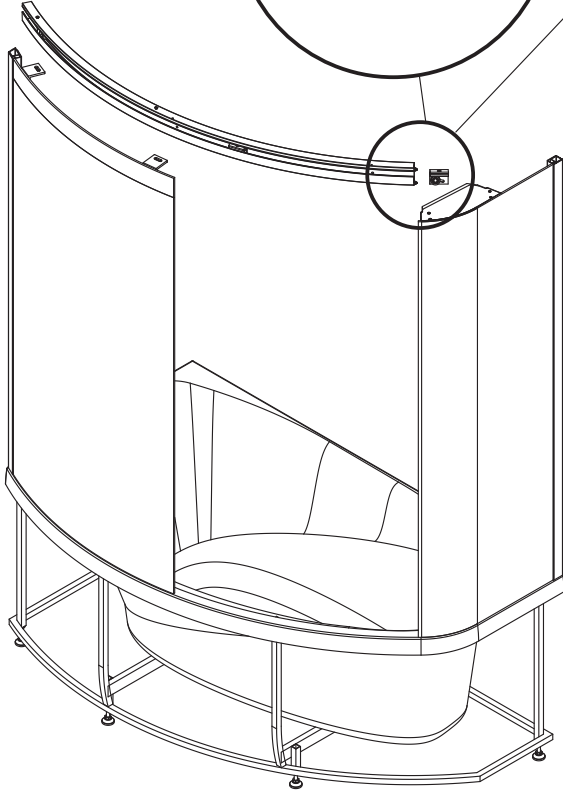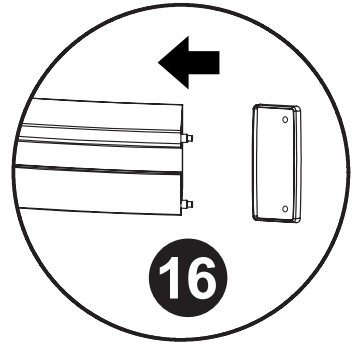


18

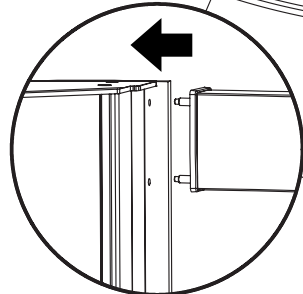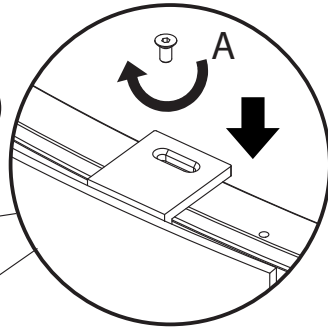


17

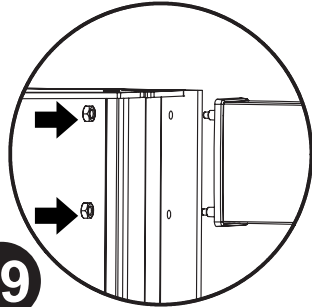






19

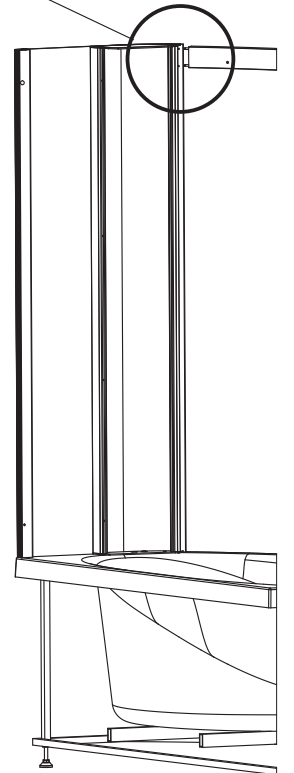

20

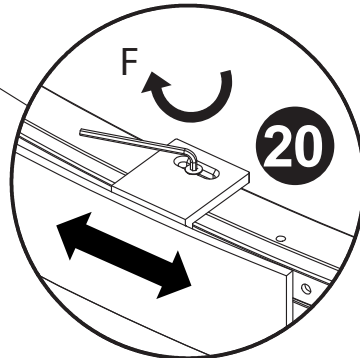

20

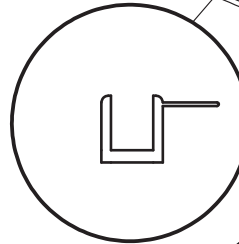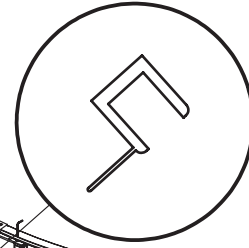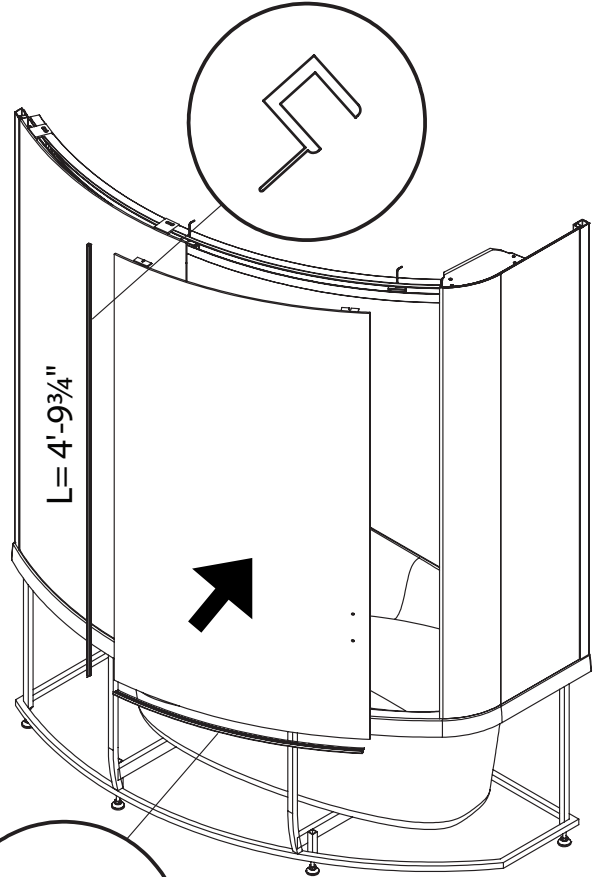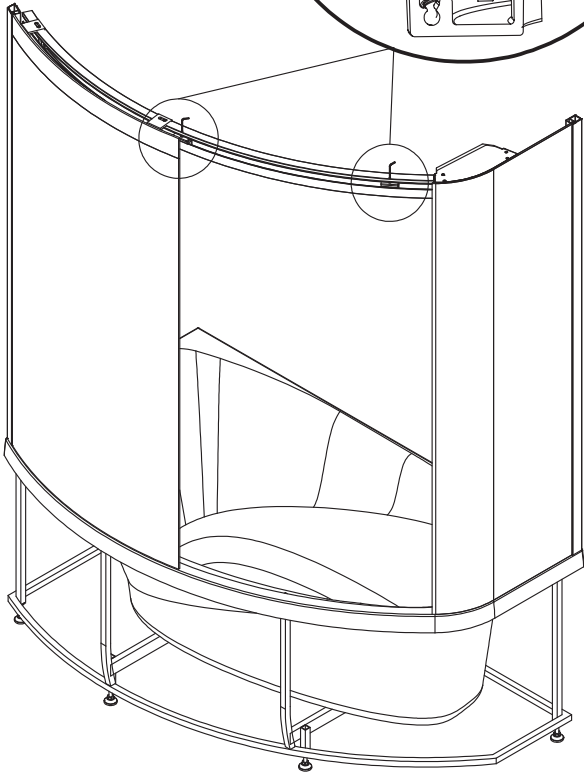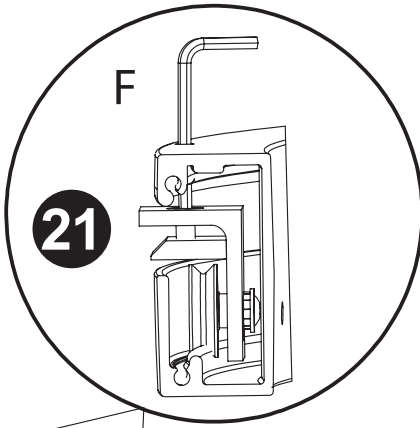

22

